

SMARTKEEPER PRO® Line Up

Universal Lock Key 3 works with

- USB Port Lock
 - USB-B Port Lock
 - USB-C Port Lock Plus
 - Link Lock
 - Link Lock Hub
 - Link On
 - Secure Drive
 - Secure Connector
- Network Port Lock Plus
 - LAN Cable Lock Plus
 - Secure LAN Cable Coupler
 - Network Module Lock 4/8/12P
 - LAN Cable Link Lock + Dedicated Cable
 - Fiber Optic LC Cable Lock Dual
 - Fiber Optic LC Cable Lock Single
 - Fiber Optic Module Lock Plus
- QSFP Port Lock
 - Serial Port Lock
 - DVI Port Lock
 - Parallel Port Lock
 - SD Port Lock
 - CF Port Lock
 - ODD Lock
 - DisplayPort Lock
- BNC Port Lock
 - RF Module Lock (Type N/M)

Lock Key Mini works with

- Mini USB-B Port Lock
 - Micro USB-B Port Lock
 - USB-C Port Lock
 - E-SATA Port Lock
- HDMI Port Lock
 - Mini DisplayPort Lock
 - RJ11 Port Lock


Lock Keys

- Universal Lock Key 3
- Lock Key Mini

PC Lock (Key Type)

Physical security product that prevents theft of PC and unauthorized opening of side panel of a desktop.

Environment

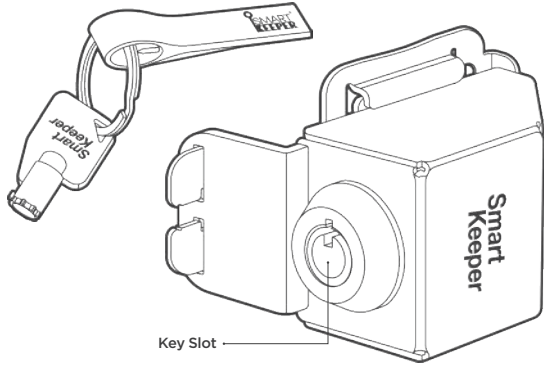

Components



PC Lock Body



PC Lock Bracket



Lock Key



Screw 1 EA




Security Cable

Specification

PC Lock (Key Type)	Width x Height x Length(Depth): 50.0 x 29.4 x 56.0mm(1.97 x 1.16 x 2.20in) Weight: 123g(4.34oz)
--------------------	--


PC Lock (Key Type)
User Guide

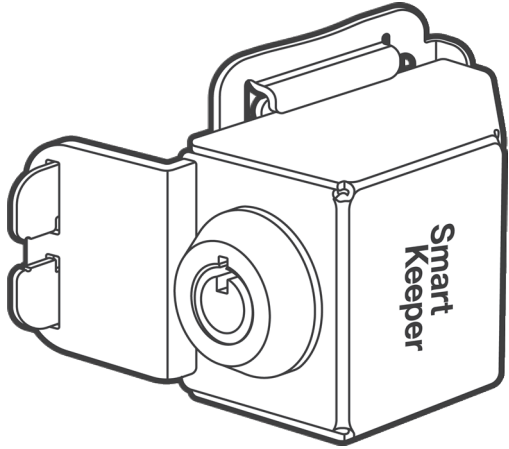

SMARTKEEPER
PROFESSIONAL

Installation


PC Lock (Key Type)

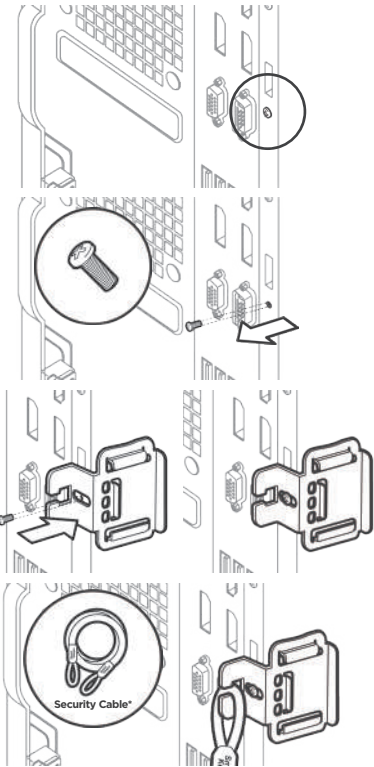


- ① Choose a location of the screw on PC body to install PC Lock.
- ② Remove the screw.
* No drilling required.
- ③ Align the bracket and reattach the screw through the opening on the bracket and tighten.
- ④ Attach the Security Cable (*optional and sold separately) to the notch on the bracket. Skip to step 5 if the Security Cable is not used.

Please Note:

- If the original screw on the PC does not fit PC bracket, use the screw that is included with the PC Lock.

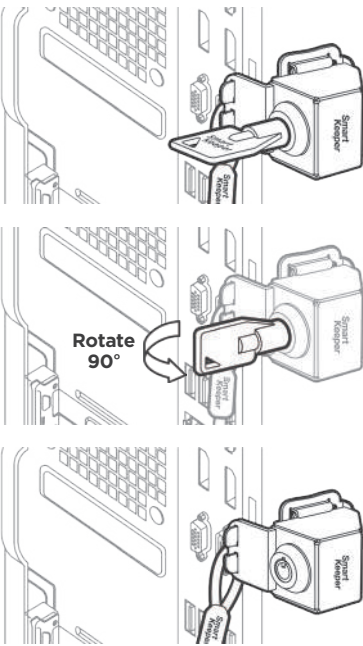


Uninstall (Removal)

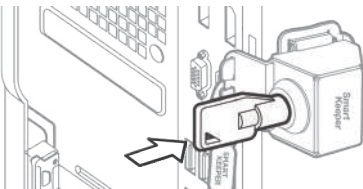

- ⑤ Attach the PC Lock body to the bracket.
- ⑥ Insert Lock and turn to lock.
- ⑦ Installation complete.

PC Lock (Key Type)

- ① Insert Lock Key.

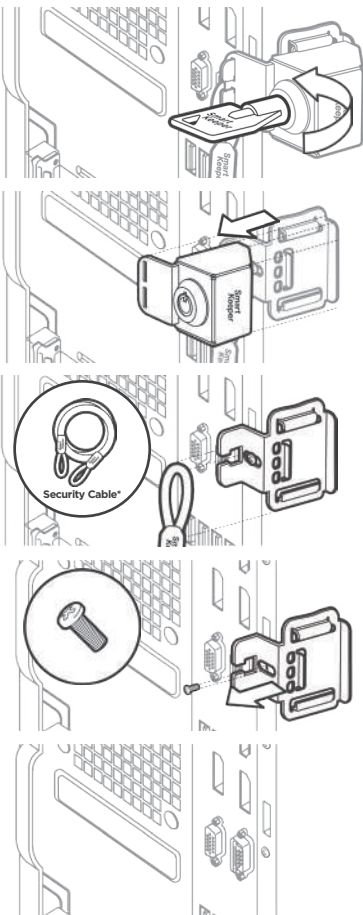

- ② Turn the Lock Key and unlock.
- ③ Remove the PC Lock body.
- ④ Remove the Security Cable (*optional and sold separately). Skip to step 5 if the Security Cable is not used.
- ⑤ Remove the screw on the bracket.
- ⑥ Uninstall complete.